
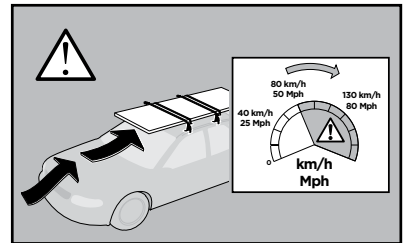
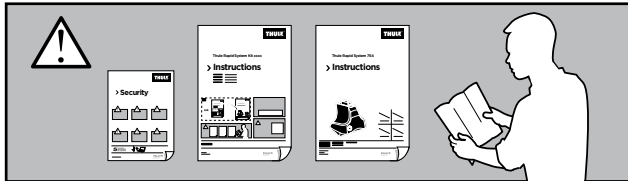
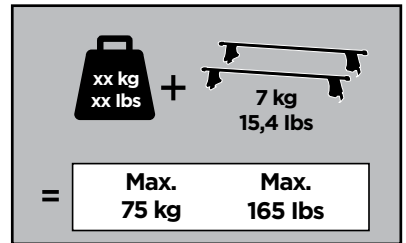


# Thule Rapid System Kit 1218

# > Instructions

**VOLKSWAGEN** **Passat**, 4-dr Sedan, 01-04 / \*02-05

\*North America

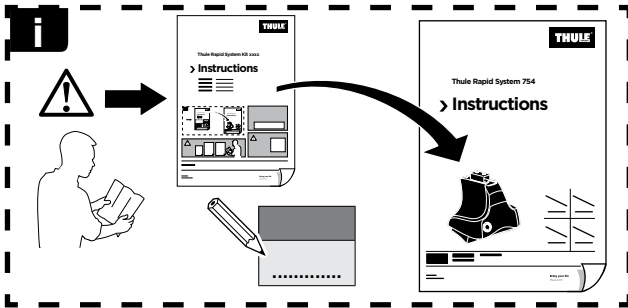

ISO 11154-E

141218


C.20121010  
519-1218-02

Bring your life


thule.com



23 x2




24 x2



386 x4





x1



x1

1



	X (scale)	X (mm)	X (inch)
<b>VOLKSWAGEN Passat</b> , 4-dr Sedan, 01-04 / *02-05	<b>34</b>	<b>991</b>	<b>39</b>

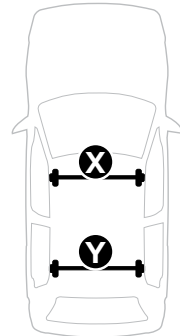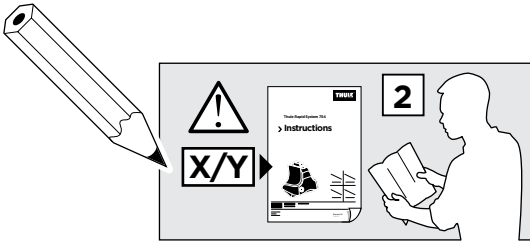


	Y (scale)	Y (mm)	Y (inch)
<b>VOLKSWAGEN Passat</b> , 4-dr Sedan, 01-04 / *02-05	<b>33</b>	<b>981</b>	<b>38 5/8</b>

**2**

**VOLKSWAGEN Passat**, 4-dr Sedan, 01-04 / \*02-05

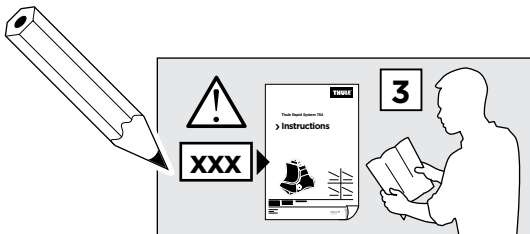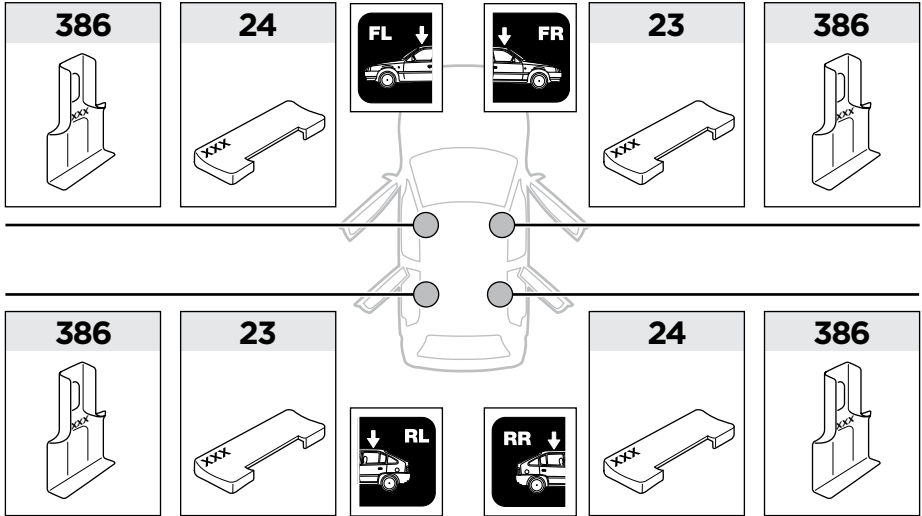

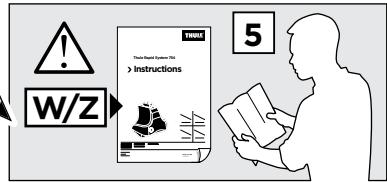**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>VOLKSWAGEN Passat</b> , 4-dr Sedan, 01-04 / *02-05	<b>280</b>	<b>680</b>	<b>11</b>	<b>26 <sup>3</sup>/<sub>4</sub></b>

